



Since 1896

# RAINIER TENT LINER TechTips

## POLE TENT LINING

1. Attach Pole Saddle on Pole top before Tent Roof PVC Install.

2. Connect Bail Ring around Pole.  
Check Knots & Shackles.

3. Lower Bail Ring to a  
working height.  
approx. 6' 0"

Erect & Tension  
Main Tent Fabric


4. Layout Ground Cover

5. Attach Liner Panel  
Apex Patch to Bail Ring Pins

6. Connect Sister Clips

7. Attach Liner Hooks to Eave Cord  
on PVC Roof.  
A - at Corners first.  
B - at Panel Joins & mid points  
C - at Pole Spacings

8. Velcro Panels together

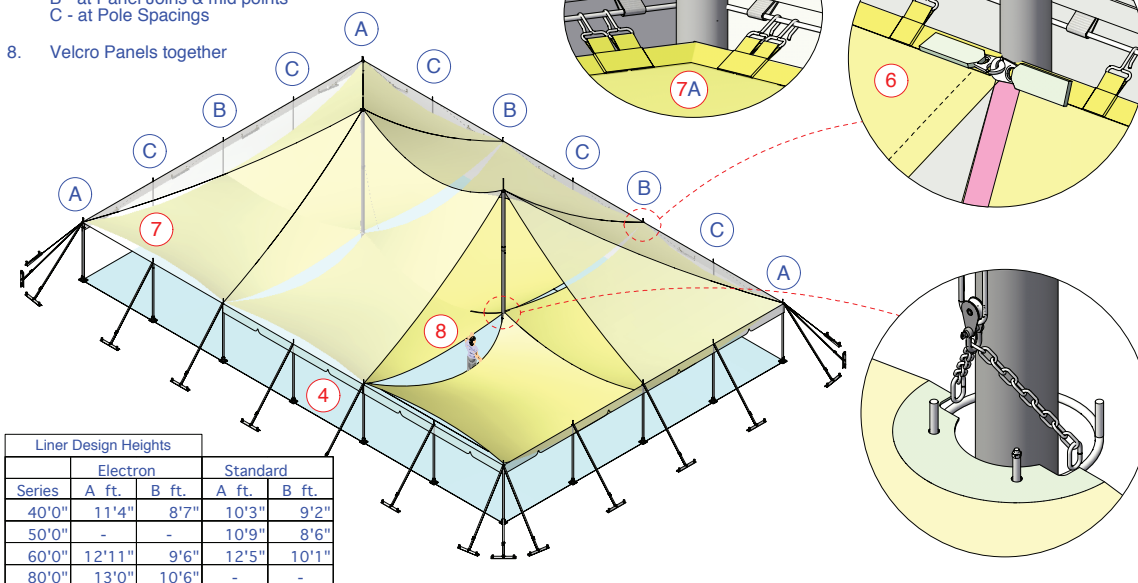


Liner Design Heights				
Series	Electron		Standard	
	A ft.	B ft.	A ft.	B ft.
40'0"	11'4"	8'7"	10'3"	9'2"
50'0"	-	-	10'9"	8'6"
60'0"	12'11"	9'6"	12'5"	10'1"
80'0"	13'0"	10'6"	-	-

9. Attach All Remaining Liner Hooks to Eave Cord.

10. Raise Bail Rings to Finished Height.  
- use Halyard Cord.

11. Tie off Halyard Cord  
on Centre pole.

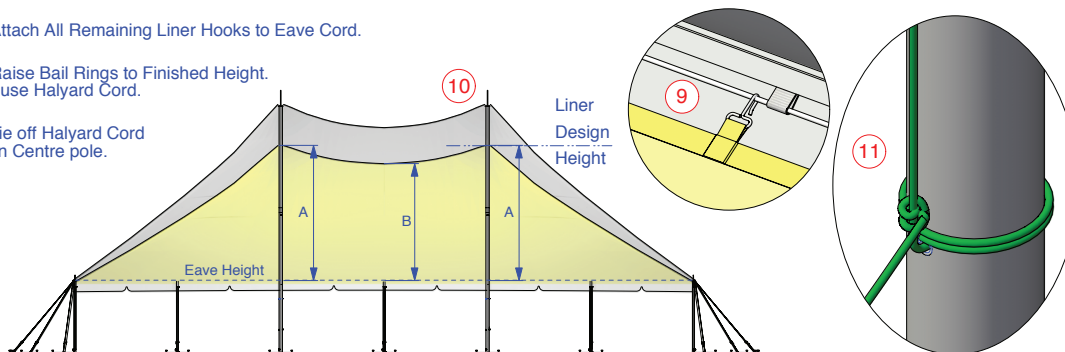

1.800.621.2495

www.RainierTents.com  
tentinfo@rainier.com