Baytex

Simplicity • Performance • Style

P1 Series Lining Guide
Installation and Parts List

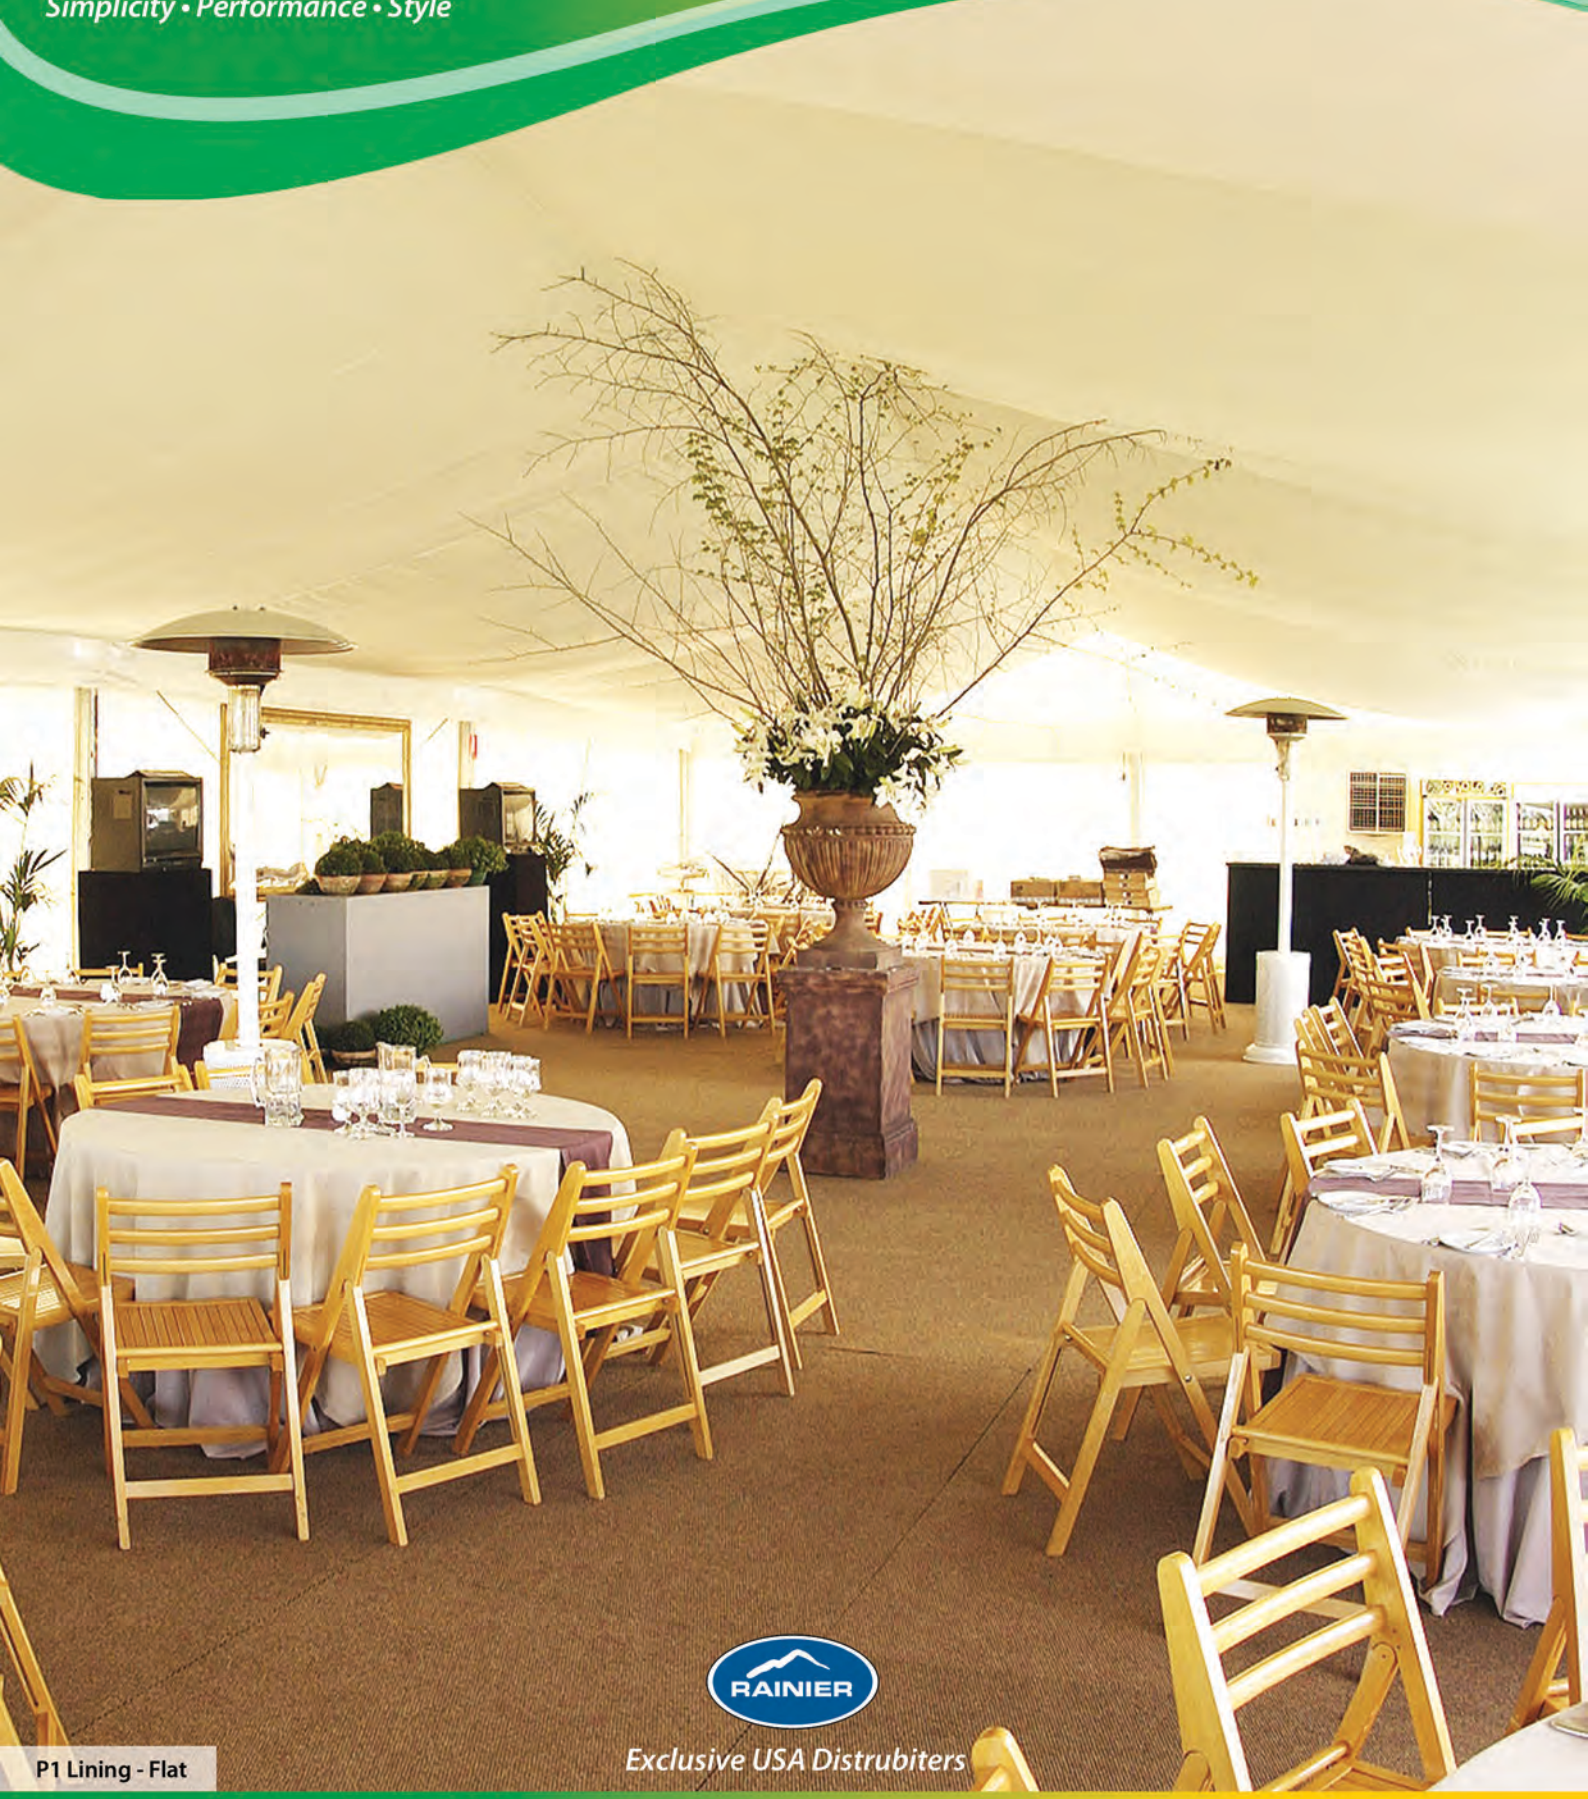

P1 Lining - Flat

RAINIER

Exclusive USA Distrubiters

www.rainiertents.com

P1 Lining Installation Guide

1a. Attach Halyard Pulley to Apex Fitting - use shackle

1b. Attach Halyard Pulley to Apex Purlin - use web Loop

2. Thread Halyard through Lifting Ring and Pulley

3. Thread Halyard through Knee Fitting

4. Layout Ground Cover

5. Attach Panel Apex Patch to Lifting Ring

6. Connect Sister Clips

7. Pull Liner out to Eave - Attach Bungy Hook to Frame

8. Velcro Panels together

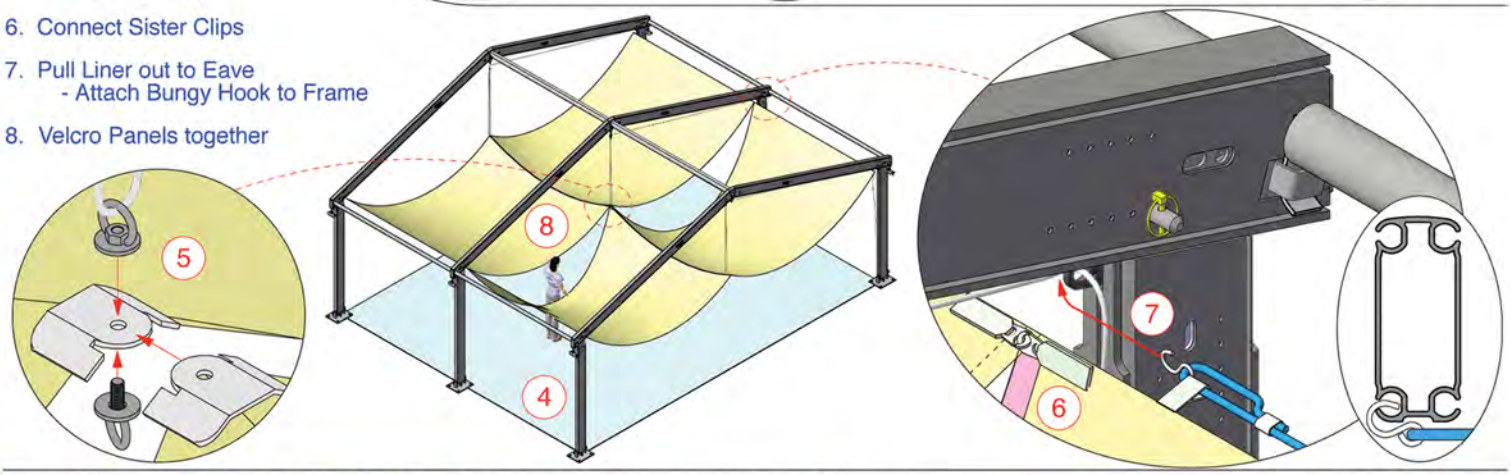

9. Attach Gable Apex Patch and Mid Apex Patch to Lifting Ring

10. Fasten Corner Strap to Leg - thread through Cambuckle

11. Velcro Panels together

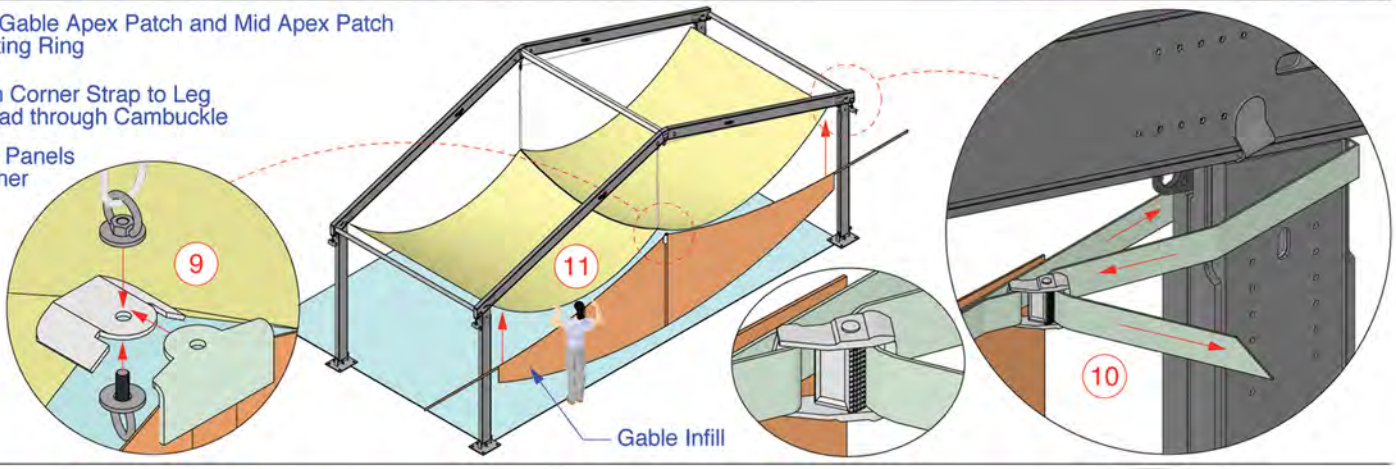

12. Attach Side Release Buckle to Eave Rail and tension

13. Raise Liner to Finished Height -Gable Eave Line is Straight

14. Tie Up Halyards at Eave -out of sight

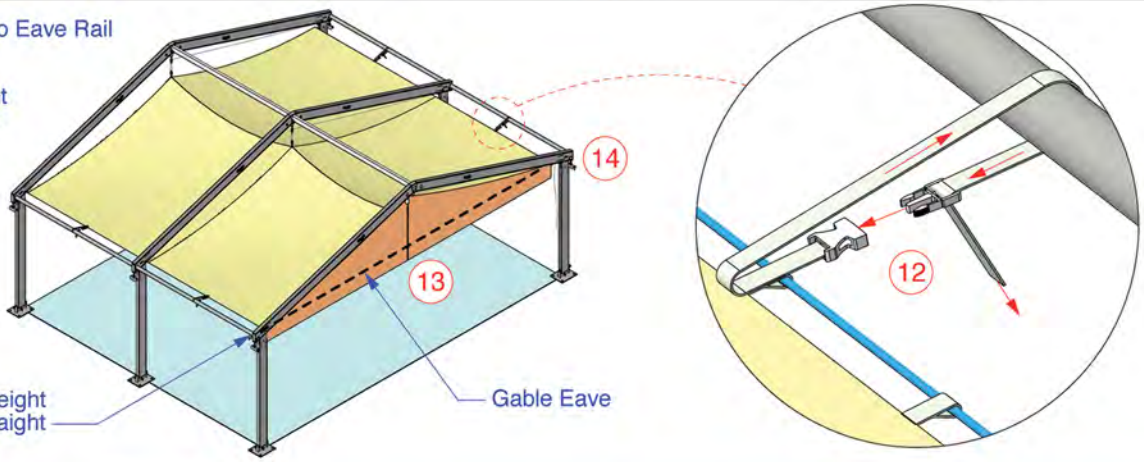

P1 Lining Installation Guide

Parts Guide

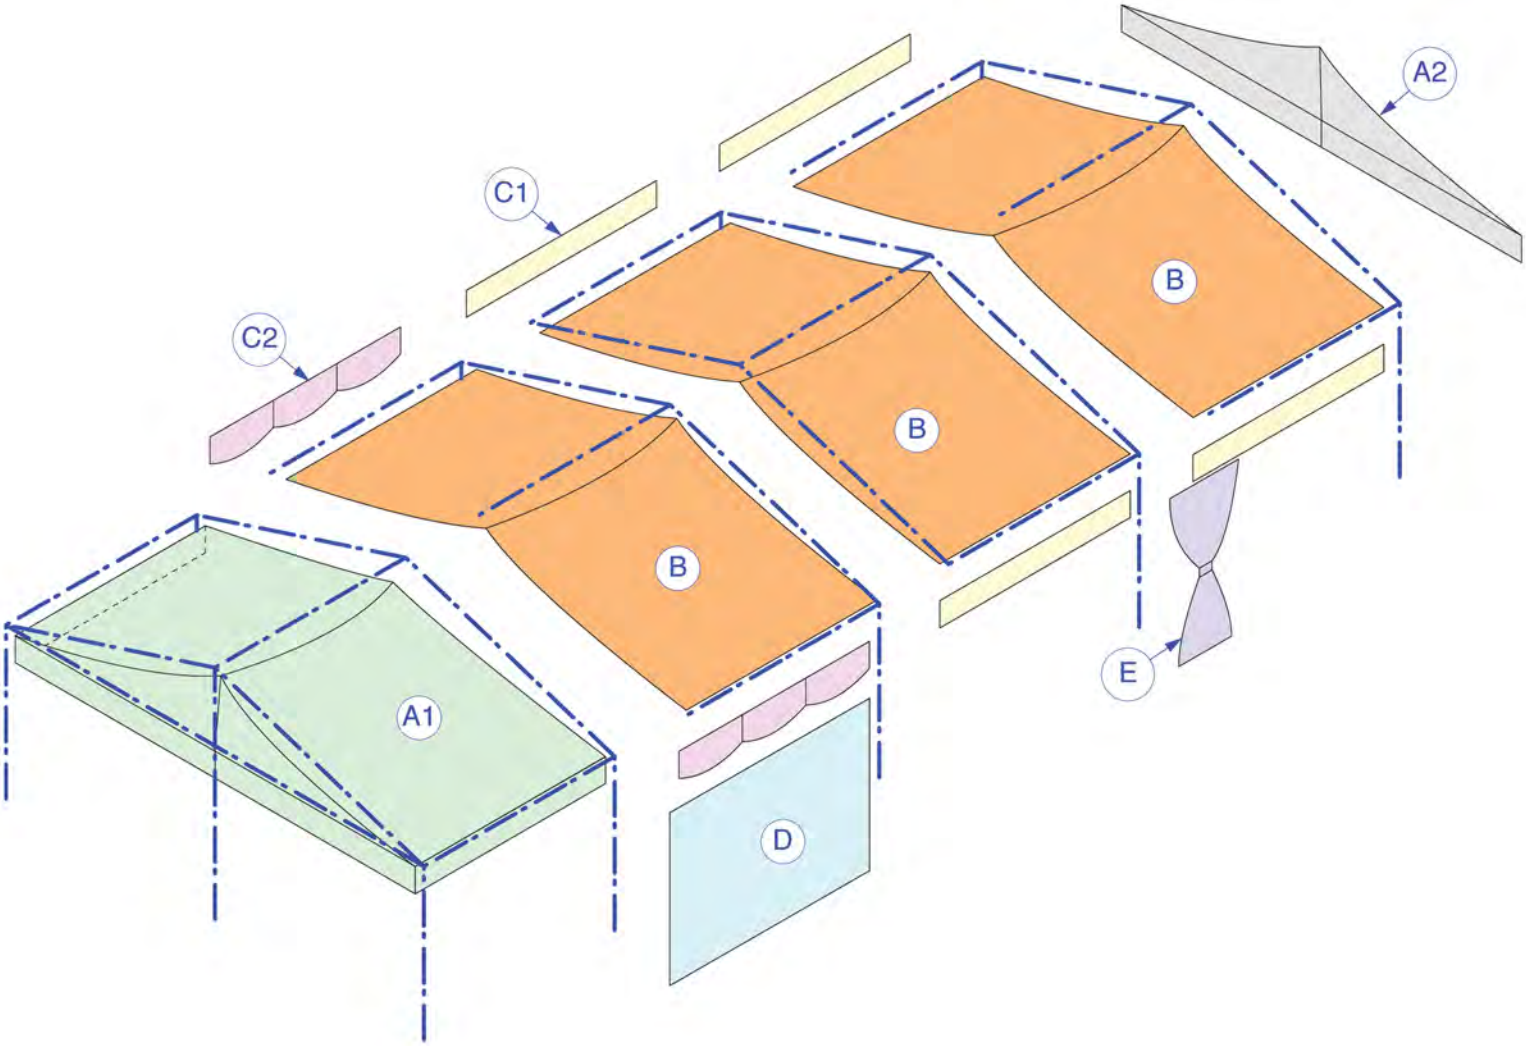

P1 Liner: Components	
Ref.	**Part Name**
A1	Gable End Starter
A2	Gable Infill - One Piece
B	Mid
C1	Detachable Valance - Std
C2	Detachable Valance - Swage
D	Wall
E	Leg Drape

P1 Series Lining Guide
Installation and Parts List

Baytex

Simplicity • Performance • Style

P1 Lining - Gathered

Rainier Industries Ltd

18375 Olympic Avenue South
Tukwila,
WA 98188

RAINIER

tentinfo@rainier.com
800-621-2495

www.rainiertents.com